

## **OPTO AND TRIAC BASICS**

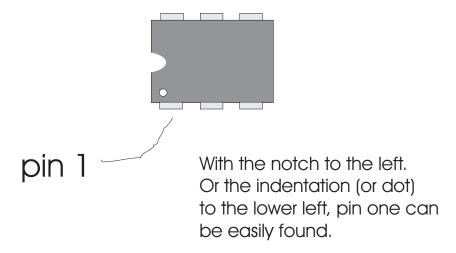

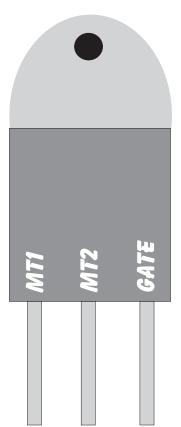

Using a ohmmeter gate to MT1 should read about 40 ohms both ways. If it doesn't read zero or infinity it is probably ok. The AC current flows from MT1 to MT2. Using the meter the MT1 to MT2 reading should be infinity either way. If the triac reads zero between these two pins then the triac is shorted. Gate to MT2 should also read as an open connection.

