


HOW TO WIRE AC LOADS TO THE 12 POINT 10 AMP TRIAC BOARD

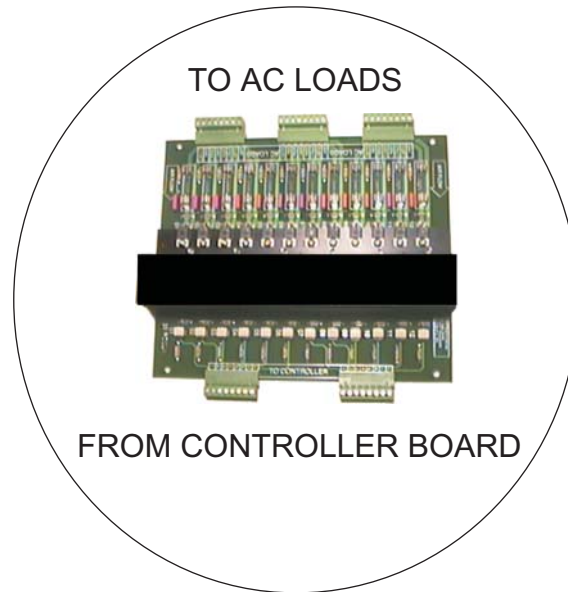


ONE (OF THREE) CONNECTORS SHOWN

THE AC LOAD CAN BE TIED TO THE FUSED OR AC "RETURN" SIDE. SHOWN, IT IS TIED TO THE AC FUSED SIDE. CHECK YOUR LOCAL REGS ABOUT SWITCHING HOT OR NEUTRALS.

01 FUSE
01 RET
02 FUSE
02 RET
03 FUSE
03 RET
04 FUSE
04 RET

ONE POINT OF LOAD.
CAN BE LAMPS OR
NEON TRANSFORMERS
OR BOTH.

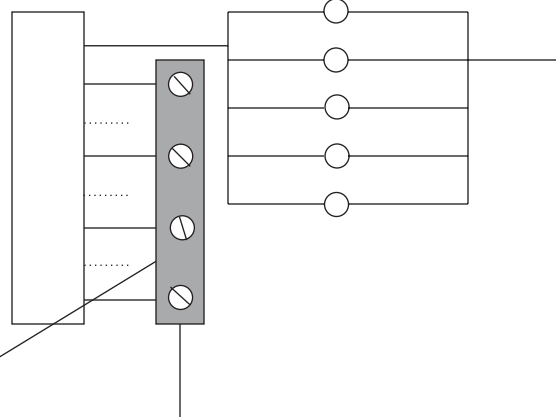

AC HOT
OR RETURN

AC RETURN
OR HOT

NOTE!
WE RECOMMEND WIRING
COMMON CONNECTIONS
TO A BUSS BAR AND NOT
JUMPERING THE PLUG

READ YOUR LOCAL CODES TO
DETERMINE WHERE CIRCUIT
BREAKERS SHOULD BE PLACED